


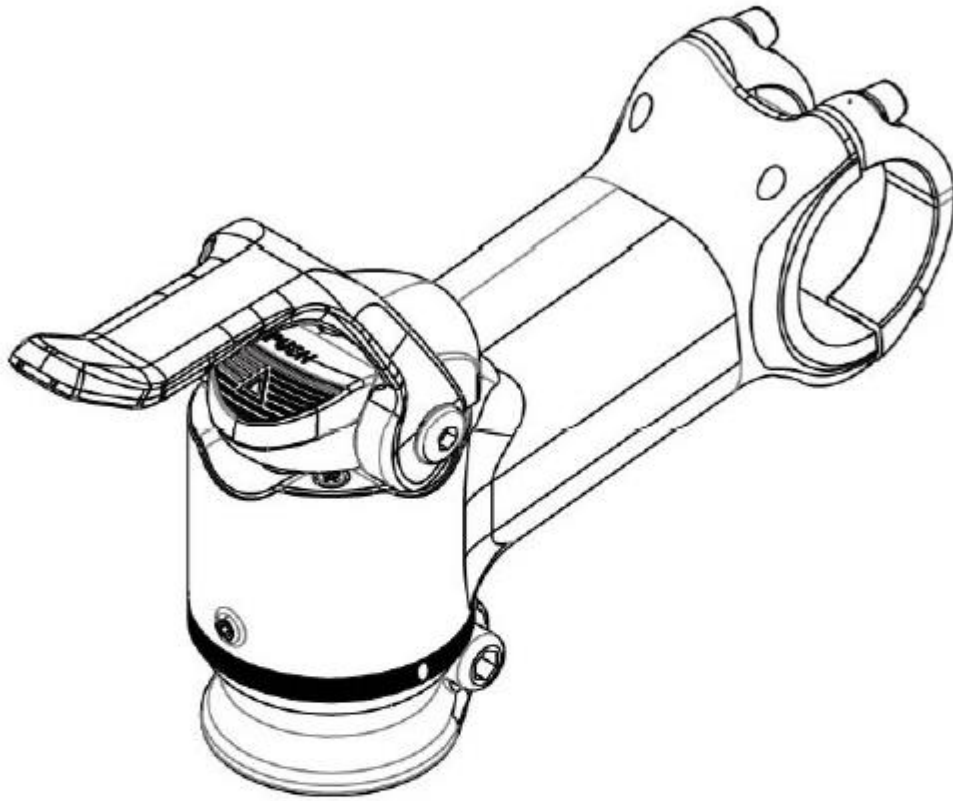

JD-ST128A Installation Guide

Thank you for your purchase of this JD-ST128A, please read through this installation guide before installing this stem and keep this guide sheet for your future reference.



TranzX



Caution!

Please make sure that your fork steerer tube size is ranging from 28.45~28.55 mm, this JD-ST128A IS PRESET to fit in within these sizes. This stem also features adjustable clamping force (please refer to "How to Reduce Play" part).

Installation Guide

1. Push the top cap forward
2. Open the lever
3. Install to the fork steerer
4. Screw the bolt to the star nut with allen key from the center of the top cap.
5. Tighten the clamp bolt to 17-18Nm
6. Tighten the M2.5 nut to 2-3 Nm
7. Close the lever

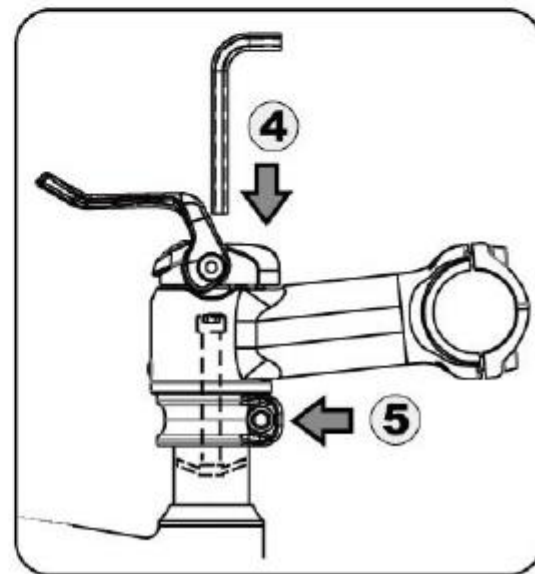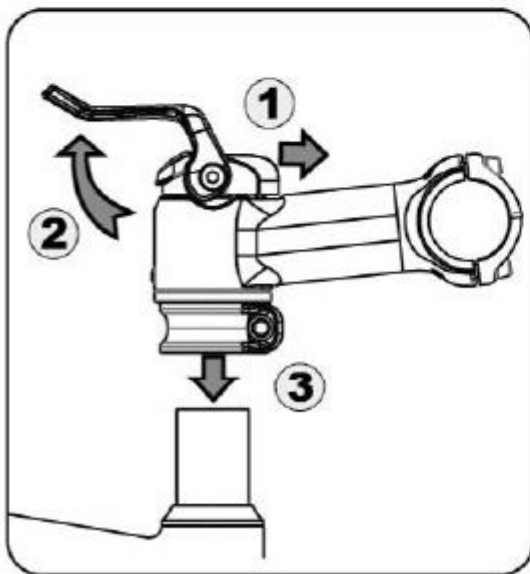

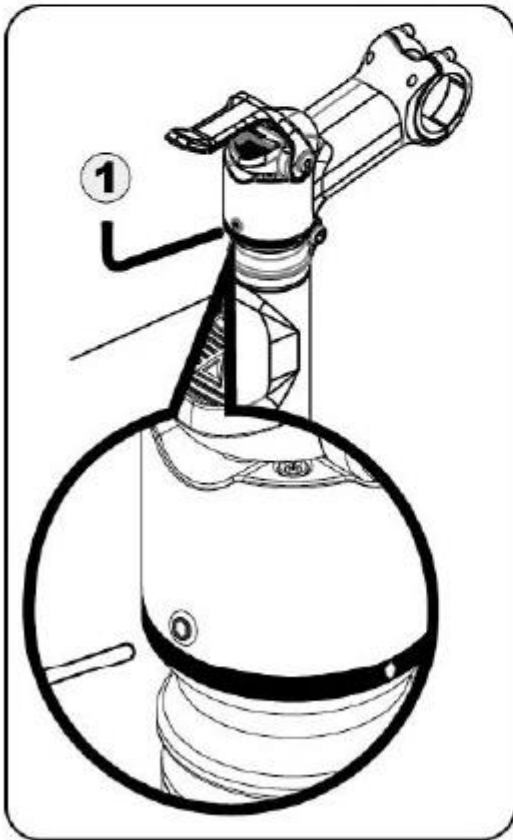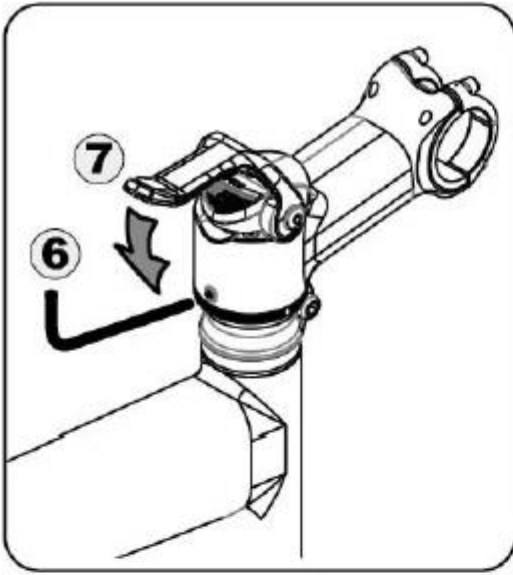

How to Reduce Play

ONLY in case of wearing parts during long time ride, JD-ST128A features an innovative system to reduce play, please follow the instruction below and mind that you will need a force gauge to perform this operation.

1. Loosen the nut.

2. Adjust the spacer to reach a closing lever of 13-15 kgs push load.

 Rotating the spacer clockwise will increase the push load, whereas rotating counter clockwise will lower down the push load.

